

28MM E-SERIES ROLLER SHADE VALANCE



INSTALLATION INSTRUCTIONS

KIT INCLUDES:

- 1x Front Rail Cover
- 1x Left End Cover
- 1x Right End Cover
- 4x Install Screws

TOOLS REQUIRED:

- Phillips Head Screwdriver
- #1 Square Head Bit

NOTE: DO NOT REMOVE PROTECTIVE FILM UNTIL VALANCE IS INSTALLED.



INSTALL INSTRUCTIONS:

1. Remove screw from left back position of left end bracket using a square head bit. See Fig. A.
2. Repeat the same process on the right side.
3. Determine which included end cover is for the left and right side of the valance. End covers will be marked with L or R.
4. Install the left end cover to the left end of the shade using one of the included shade screws and a Phillips head screwdriver. See Fig. B.
5. Taking the valance front rail cover, place it over the front of the shade and slide it towards the installed left end cover. Ensure the valance edges are properly fitted into the grooves on the end cover. Secure front rail cover in place using an included shade screw. See Fig. C.
6. Install right end cover to the right end of the shade. Be sure to match up the screw holes and fit front valance cover edges into the right end cover grooves. Secure in place with the two remaining shade screws. See Fig. D.
7. The shade is ready to be installed.

PRODUCTION SPECS:

The valance length matches the entire width of the shade. Refer to head rail label for shade width.

**For additional technical support,
call 574-AIRXCEL (574-247-9235)**

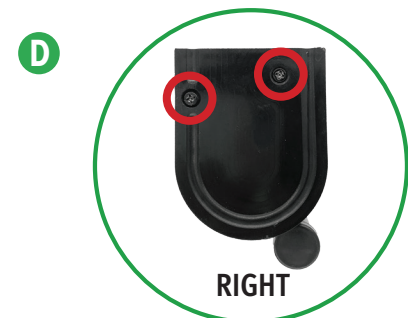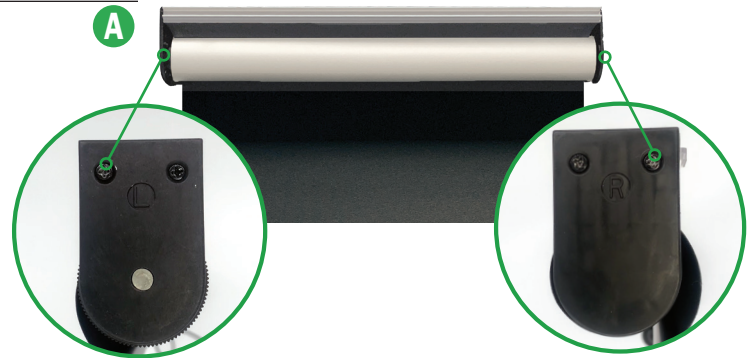

2780 Co Rd 6 | Elkhart, IN 46514 | www.unitedshade.com