

SKYLIGHT PLEATED SHADE




INSTALLATION INSTRUCTIONS

INSTALLATION:

1. Locate pre-drilled holes in the headrail (A). They are located on the underside of the headrail behind the first fabric pleat. The holes will have plastic installation grommets. Be careful not to damage the fabric when installing the screws. A long screw bit is recommended (not included).
2. Position the headrail (A) in skylight opening. Install screws through the headrail (A) in the pre-drilled holes and into the skylight frame.
3. Push the center rail (B) next to the headrail (A).
4. Position the rail (C) to the other end of the skylight, then install screws through the pre-drilled holes and into the frame.

NOTE: BOTTOM RAIL SHOULD HANG APPROXIMATELY 1" SHORT IN FREE HANG POSITION (BEFORE INSTALLING BOTTOM RAIL TO OPENING). THIS IS WHAT CREATES THE TENSION. IF THE SHADE WILL NOT STAY IN UP POSITION AFTER INSTALLATION, IT IS THE INCORRECT SIZE FOR THE OPENING.

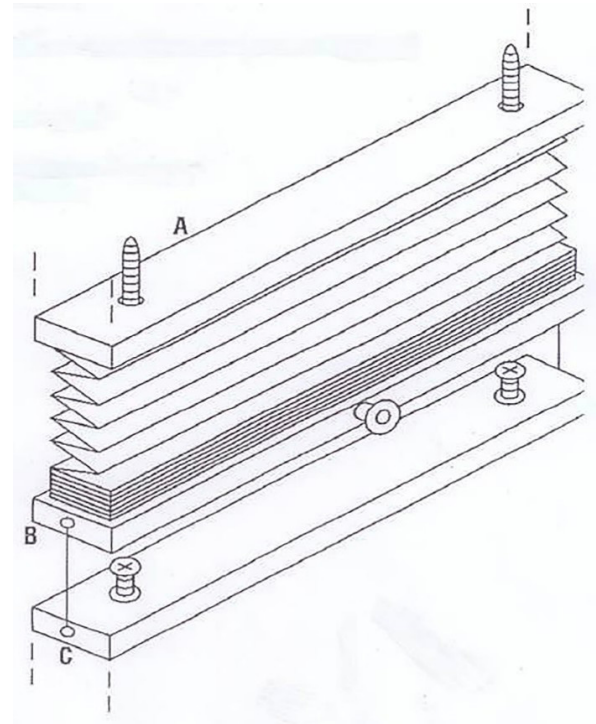

CLEANING AND CARE:

Shades should be kept in the closed or up position when not in use to maintain pleat retention and minimize dirt and soil build-up. Do not store shades in the down position. This may cause some loss of pleat retention if the shades are not operated on a consistent basis.

Shades can be easily cared for by simply dusting or using a vacuum cleaner attachment. Do not use spot remover, household cleaners or detergents to remove soiled spots, as these may cause damage to fabric or loss of color from fading.

NOTE: If your coach must be stored for an extended period, store the shades in the up position and cover your windows with additional protection (I.E. Cut out cardboard).

For additional technical support, call 574-AIRXCEL (574-247-9235)



2780 Co Rd 6 | Elkhart, IN 46514 | www.unitedshade.com