


## VALANCE SHADE PLEATED OR ROLLER



### INSTALLATION INSTRUCTIONS

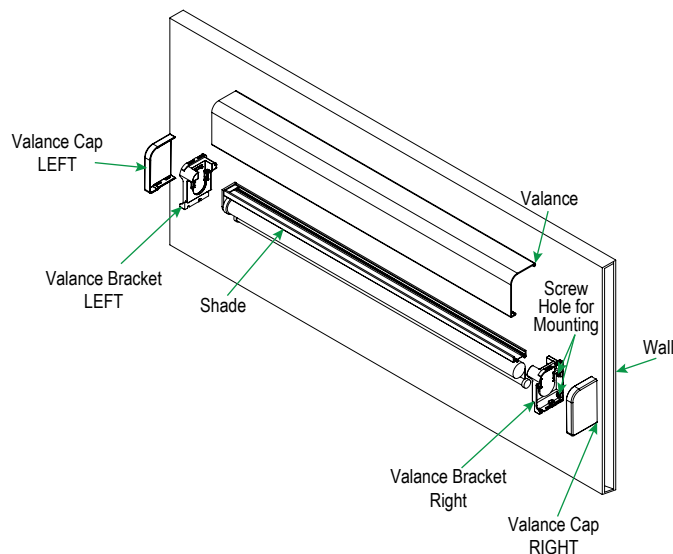

#### IMPORTANT!

Valance shade product is **WALL MOUNT** only. Ceiling mount is not an option.

#### TOOLS REQUIRED:

Chop Saw, Drill, Drill Bit, Mounting Screws (recommended size: #6 x 1½")

#### CUT VALANCE TO CORRECT LENGTH:

Please note: The valance cutting process is the same for both roller shade and pleated shade products. Follow the instructions below for both types.

1. Determine Valance cut length: Locate label on the roller/pleated shade's headrail. The first number on the shade label is the width. See Fig. 1.
2. Once the shade width has been determined: Add 7/8" to shade width and this total will be the length to cut the valance to.  
Example: Shade width is 20", add 7/8" and valance should be cut to 20 7/8".
3. Using a chop saw, cut the valance to size.

#### ASSEMBLE AND MOUNT THE SHADE:

1. Snap on right and left valance bracket onto each shade end. NOTE: The left and right brackets are different, so please ensure you use the correct one for each side. Brackets will be marked with an L for left and R for right. See Fig. 2.
2. Snap valance onto valance brackets.
3. Attach the shade to the wall by using four mounting screws through the openings in the outer flange of the left and right valance brackets. See Fig. 2.
4. Snap on the left and right valance caps. NOTE: The left and right caps are different so please ensure you use the correct one for each side.

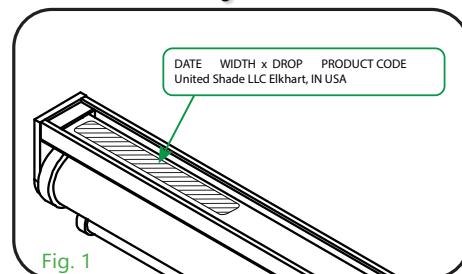


Fig. 1

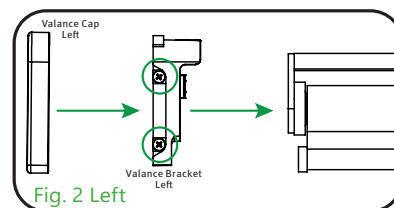


Fig. 2 Left

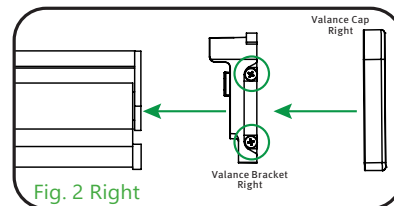


Fig. 2 Right

**For additional technical support,  
call 574-AIRXCEL (574-247-9235)**



2780 Co Rd 6 | Elkhart, IN 46514 | [www.unitedshade.com](http://www.unitedshade.com)