

CORDLESS PLEATED SHADES CORRECTIVE ACTION FOR BALANCING SHADE

WHAT YOU WILL NEED: **FLATHEAD SCREWDRIVER**
WEIGHTS

WE HIGHLY RECOMMEND THAT YOU KEEP SHADE INSTALLED WHILE ADDING WEIGHTS. Please note: Shade below is not installed for photo purposes.

INSTRUCTIONS:


Step 1- Use the flathead screw driver to carefully remove the end cap. The end cap should slide out easily.



Step 2- Add the weight into the hem bar. Please refer to the chart for additional weight requirements by shade size.



Step 3- Line the end cap up with the headrail and insert it into the rail, pushing it closed. Please note- the curved side of the cap needs to match with the curved side of the rail.

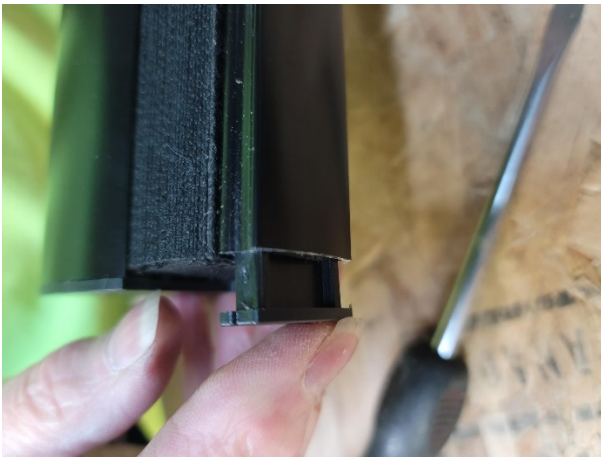

Curved side of end cap



Curved side of hem bar

Step 4- Repeat on other side

Shade Size:	Width	Drop	Additional weights required
	15	24	2
	15	37	3
	16	38	3
	19	38	4
	26	24	3
	30	44	2
	39	24	3
	51	24	2
	51	37	2
	67	36	6

To determine shade size measure the width and height (drop) of the window and find the size that matches closes on the chart.

For an instructional video visit: UnitedShade.com and click on “How to” videos or scan the QR code below



IF YOU HAVE ANY QUESTIONS PLEASE REACH OUT TO ALLENA THOMPSON AT UNITED SHADE FOR ASSISTANCE.

574-264-2699 EXT 1303

ATHOMPSON@UNITEDSHADE.COM